


# B1DIL

## AVR32 USB Module

Rev. 1.0  
Documentation Rev. 4

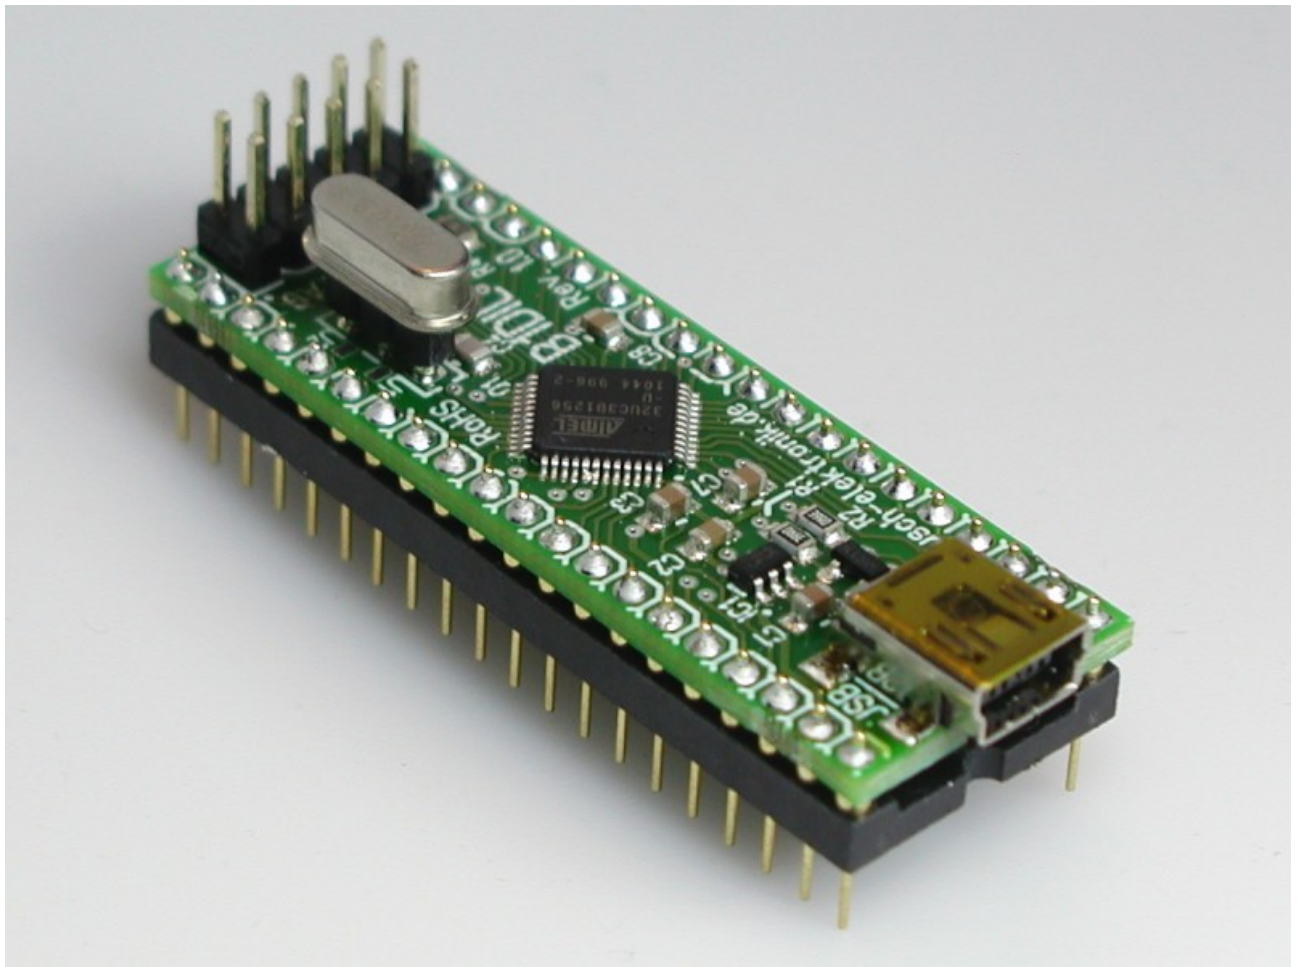

Reusch Elektronik

© 2011 Reusch Elektronik, Dipl.-Ing. (FH) Rainer Reusch

[www.reusch-elektronik.de](http://www.reusch-elektronik.de)

<http://products.reworld.eu/b1dil.htm>

File: B1DIL\_Manual  
Created: 2011-06-17  
Changed: 2011-08-02

# Table of Contents

1. Introduction.....	1
1.1 Assembly Variations.....	1
1.2 Oscillator.....	1
1.3 Introduction Example.....	2
2. Technical Information.....	3
2.1 Schematic.....	3
2.2 JTAG Pin Assignment.....	4
2.3 Dual-Inline-Socket Pin Assignment.....	4
2.4 Power Supply Considerations.....	5
2.5 Technical Data.....	5
2.6 Dimensions.....	5
3. Application Notes.....	6
3.1 Power Supply Options.....	6
3.2 Memory Programming.....	7
4. Concluding Remarks.....	9
4.1 Application Software.....	9
4.2 Links.....	9
4.3 Statement and Disclaimer.....	9
4.4 Technical Support.....	10

## **Please note:**

This document refers to revision 1.0 of the B1DIL module. If you are using a device with another revision number, please refer to the corresponding documentation!

---

Reusch Elektronik  
Dipl.-Ing. (FH) Rainer Reusch  
Blumenstr. 13  
D-88097 Eriskirch  
Germany

Phone: +49-7541-81484  
Fax: +49-7541-81483  
E-Mail: [info@reusch-elektronik.de](mailto:info@reusch-elektronik.de)  
Homepage: [www.reusch-elektronik.de](http://www.reusch-elektronik.de)

© 2011 Reusch Elektronik, Dipl.-Ing. (FH) Rainer Reusch

This document is protected by copyright law. It is prohibited to copy or distribute without permission of Reusch Elektronik.

# 1. Introduction

*B1DIL* is a tiny interface module for an Atmel AVR32 microcontroller with USB interface in TQFP48 casing. The module fits to an ordinary 40 pin dual-in-line socket. The B1DIL module is helpful in experiments, development and prototyping with USB-AVR32 microcontrollers.

The module contains the crystal oscillator. A socket is used, so it is easy to replace the crystal or ceramic resonator to get the required frequency.

The USB interface (mini USB plug) is on board.

The module contains a 10 pin header for in-system-programming and debugging (Atmel 10 pin JTAG standard). These pins are also available by the dual-inline connector pins (except the TCK connector, pin 1).

The B1DIL module is easy to use, because it contains all necessary and time critical interfaces. On the other hand it gives full flexibility in power supplement and connectivity!

## 1.1 Assembly Variations

The module is available in one assembly version:

- as “B1DIL-AT32UC3B1256”, assembled with AT32UC3B1256 from Atmel

The printed circuit board is also available “naked” (not assembled). It is suitable for the following Atmel microcontrollers with TQFP48 casing:

- AT32UC3B164
- AT32UC3B1128
- AT32UC3B1256
- AT32UC3B1512

## 1.2 Oscillator

A 3 pin socket is used for the oscillator. This makes the module suitable for a

- crystal (HC49)
- 2 pin ceramic resonator
- 3 pin ceramic resonator

All devices in wired technology (no SMD). It might be necessary, to remove the two 22pF capacitors (C4 and C5), if a 3 pin ceramic resonator is used.


For correct USB function, the following frequencies are required:

- 8.000MHz
- 12.000MHz (delivery standard)
- 16.000MHz

**Note:** The pins of oscillator o (XINo, XOUTo) are available at the DIL pins 25 and 26). While the microcontroller is operating with osc o, this two pins can't be used as GPIO ports. J1 and J2 are solder pads, which are closed as factory default. These pads connect the oscillator with the DIL pins. J1 and J2 can be opened for disconnection (use a cutter).

### 1.3 Introduction Example

The wiring example as shown, supplies the module by USB and the onboard voltage regulator. Programming can be done via USB interface, bootloader and “Atmel batchisp”. For details refer to chapter 3.3.2.

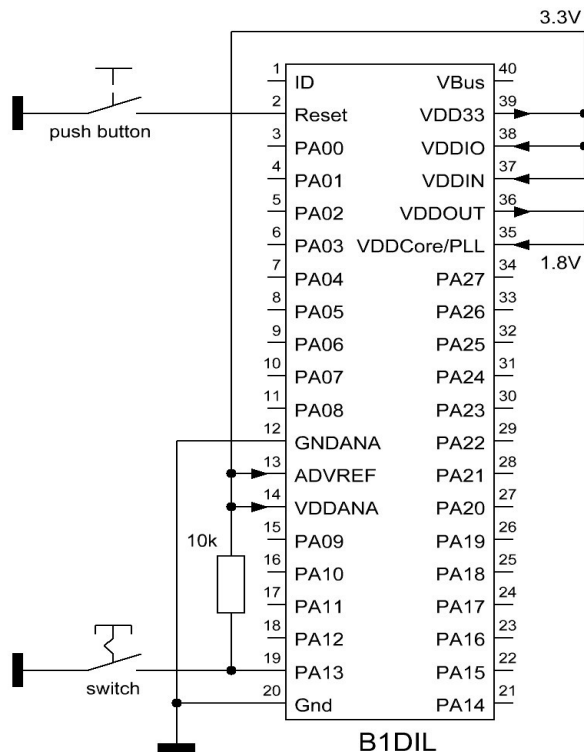

Without firmware, the module always will enter the bootloader. It will respond as “Atmel device” at the personal computer. At the first plugging, it is asked for a driver installation. You have to use the LibUSB-Win32 drivers, which are coming with the “Atmel FLIP” installation package.

After the driver installation, the device can be accessed by “batchisp” to program your firmware application. This command line tool is coming with the “Atmel FLIP” installation.

After programming, the device has to be resetted (push reset button) with open switch (high level) at PA13, to launch the programmed firmware.

To relaunch the bootloader, close the switch (low level) at PA13 and push the  $\overline{\text{Reset}}$  button for a moment.

#### Please note:


There are more options, to supply the device. The device also can be programmed via *JTAG* interface and *JTAG* programmer. For more information read the application note chapter, please.

#### Warnings:

If the B1DIL module is connected to USB, pin 40 outputs the USB supply voltage of approximately 5.0V. **Never** connect VDDIO (pin 38), VDDIN (pin 37) or VDDCore/PLL (pin 35) to VBus (pin 40)! Maximum supply voltage for the controller is 3.6V!

## 2. Technical Information


### 2.1 Schematic

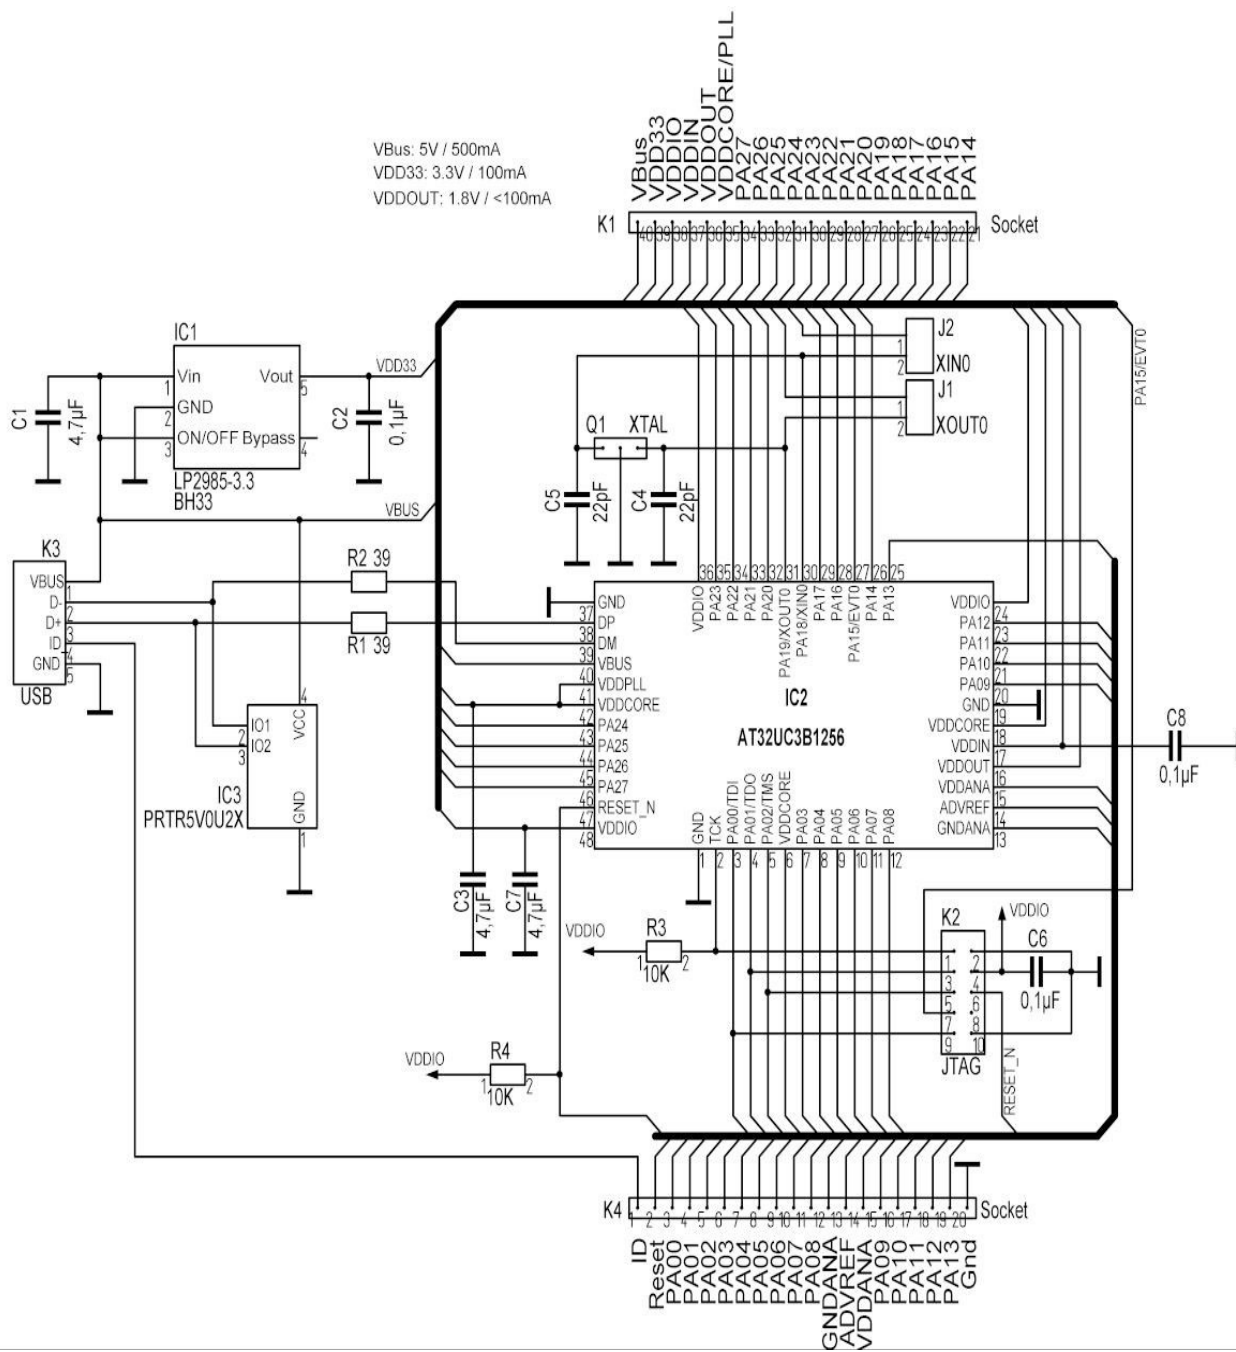

## 2.2 JTAG Pin Assignment

The JTAG programming adapter is a 10 pin header, which corresponds with the 10 pin Atmel JTAG connector. Therefore the usual Atmel in-system programmers/debuggers (such as “AVR JTAG MKII”) are suitable.

Pin	Function
1	TCK
3	TDO
5	TMS
7	EVT0
9	TDI

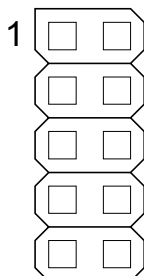

Function	Pin
Gnd	2
VDD (3.3V)	4
Reset	6
	8
Gnd	10

## 2.3 Dual-Inline-Socket Pin Assignment

The pin assignment of the dual-inline connector.

Pin	Function
1	ID (USB connector)
2	Reset
3	PA00
4	PA01
5	PA02
6	PA03
7	PA04
8	PA05
9	PA06
10	PA07
11	PA08
12	GNDANA
13	ADVREF (max. 3.6V in)
14	VDDANA (3.3V in)
15	PA09
16	PA10
16	PA11
18	PA12
19	PA13 (bootloader)
20	Gnd



Function	Pin
VBus (5.0V out)	40
VDD33 (3.3V out)	39
VDDIO (3.3V in)	38
VDDIN (3.3V in)	37
VDDOUT (1.8V out)	36
VDDCore/PLL (1.8V in)	35
PA27	34
PA26	33
PA25	32
PA24	31
PA23	30
PA22	29
PA21	28
PA20	27
PA19	26
PA18	25
PA17	24
PA16	23
PA15	22
PA14	21

For information about the alternative pin usage, please refer to the Atmel data sheets.

## 2.4 Power Supply Considerations

The B1DIL module contains a 3.3V regulator. The input is connected to VBus (pin 40), the output is available thru VDD33 (pin 39). This output can be used to supply the I/O of the microcontroller (VDDIO, pin 38) and external circuitry. Please note: The maximum output current of this voltage regulator is 100mA! If more current is needed, an external voltage regulator has to be used (refer to application note chapter).

The core and the PLL (VDDCore/PLL, pin 35) of the microcontroller requires a supply voltage of 1.8V. For this reason, the microcontroller contains a 1.8V regulator. The input of this regulator (max. input voltage 3.6V!) is available thru VDDIN pin (pin 37). This pin can be connected with VDD33 (pin 39). Connect the 1.8V output (VDDOUT, pin 36) of this regulator to the core/PLL supply input (VDDCore/PLL, pin 35). Of course, an external 1.8V regulator also can be used.


For more information refer application note chapter, please.

## 2.5 Technical Data

Supply voltage (I/O, 1.8V regulator)	3.0V to 3.6V, 3.3V typically
Core and PLL supply voltage	1.65V to 1.95V, 1.8V typically
Supply current	<30mA (depends on operation frequency and application)
Clock frequency	8MHz, 12MHz or 16MHz (required for USB compatibility)
Operation temperature	-25°C to 70°C
Storage temperature	-25°C to 85°C

For further information related to the microcontroller, please refer to the Atmel data sheet of the microcontroller (doc32059.pdf).

## 2.6 Dimensions

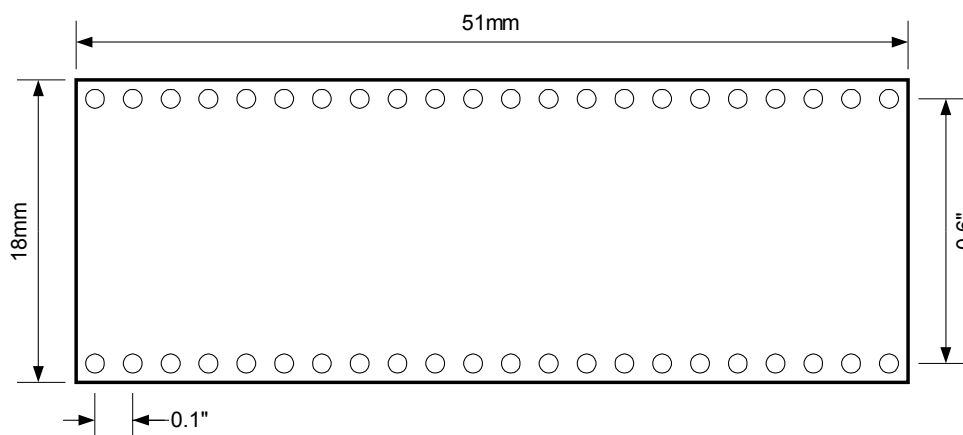

### 3. Application Notes

#### 3.1 Power Supply Options

The module can be supplied by USB bus power or it can be self powered.


For bus powered supply with 5V, only a few connections are necessary. The onboard 3.3V regulator is used.

For bus powered supply with higher current demand (max. 500mA), an external 3.3V (3.0V to 3.6V) regulator has to be used.

For self powered supply with higher current demand (gt. than 500mA), this 3.3V regulator is connected to the external supply voltage source.

The core and the PLL of the microcontroller also can be supplied by an external voltage regulator. Usually this is not necessary.

**Note:** VDDANA (pin 14) has to be supplied, otherwise the ports PA03 up to PA08 doesn't reach full high level and current consumption increases!

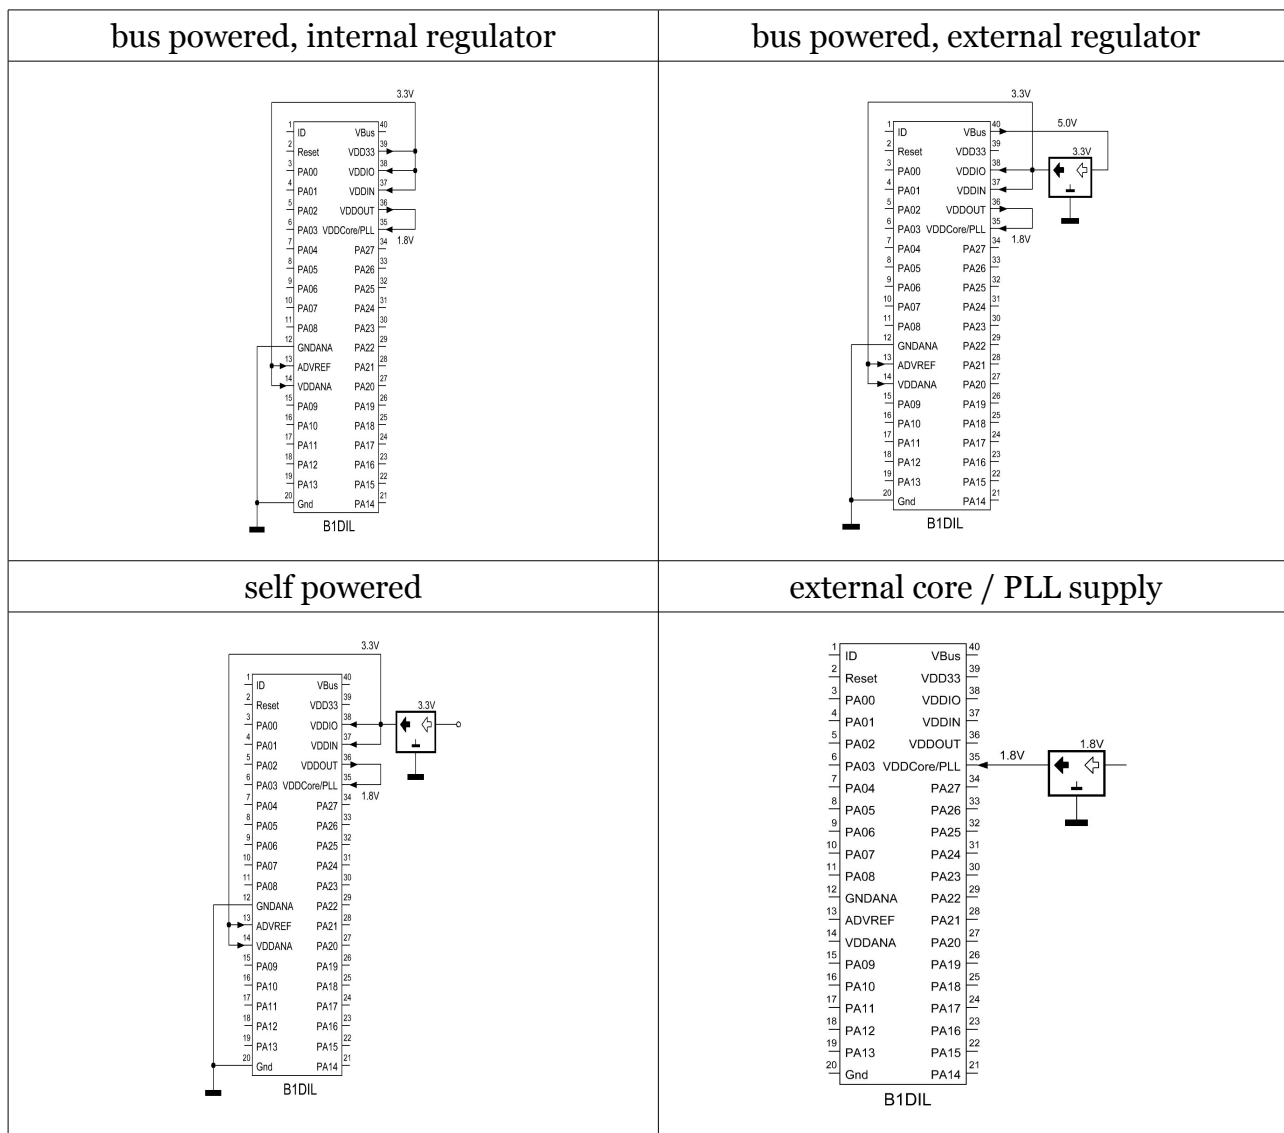

For further information please refer to the Atmel data sheet of the microcontroller.



## 3.2 Memory Programming

The Atmel microcontroller contains an USB bootloader as factory default. So there are two ways, to program the flash memory of the microcontroller:

- programming via USB interface, bootloader and *batchisp*
- use of in-system-programming with JTAG programmer

### 3.2.1 Launching the Bootloader

The B1DIL module comes with the factory default DFU bootloader, which allows programming and upgrading of firmware without programming device. This bootloader will always be launched after a reset, because it is placed at address 0x80000000, the first flash memory address, where executing starts after a reset. The upper two bits of the general-purpose fuse bits and a state of a defined port determines, if the bootloader continues or a jump to the application firmware is done.

Without programmed application firmware (delivery default), the microcontroller always will launch the bootloader.

If an application firmware is programmed, the port PA13 has to be kept in low state (connection with ground) while reset is present, to launch bootloader. A high state on PA13 (e.g. by a pullup resistor) will launch the programmed firmware.

**Note:** Port PA13 as the launching pin for the bootloader is factory default. The port and its state can be changed by reprogramming the *flash user page*. For detailed information refer Atmel documentation *doc7745.pdf*.

**Important hint:** The microcontroller has to run with oscillator 0 (Osc0) and a frequency of 8, 12 or 16MHz! Otherwise a proper USB communication is not possible!

### 3.2.2 Programming with *flashisp*

“flashisp” is a command line tool for automatic device programming. It comes with the software package of “Atmel FLIP”. *batchisp* will be found in the subdirectory *bin* of your FLIP installation path. Usually the path environment variable is set to this directory. So *flashisp* can be called from any directory without the requirement to pretend the hole path. Detailed information about the usage of this command line tool will be given in the help of FLIP (launch FLIP and call the help over menu).

#### Example

This examples separates the programming commands into a script file (e.g. named *flash\_write.txt*). The *batchisp* command will be written into a batch file (e.g. *flash\_write.bat*).

The contents of *flash\_write.bat*:

```
batchisp -cmdfile "flash_write.txt"
```

The contents of *flash\_write.txt*:

```
-device AT32UC3B1256  
-hardware USB  
-operation erase f loadbuffer "myfile.elf" program verify start reset 0
```

“myfile.elf” is the firmware file to be programmed. Pretend path, if necessary. Hex files can also be used.

The “Atmel Flip” installation package can be downloaded from the Atmel homepage. Search for “FLIP” or try the following link:

[http://www.atmel.com/dyn/products/tools\\_card\\_mcu.asp?tool\\_id=3886](http://www.atmel.com/dyn/products/tools_card_mcu.asp?tool_id=3886)

### 3.2.3 In-System-Programming

The B1DIL module contains an Atmel JTAG connector for in-system-programming and debugging. An Atmel JTAG compatible programming device (such as “AVRJTAG MKII”) is required. The advantages of this programming method:

- full control over the microcontroller, all memories and fuses
- comfortable integration into “AVR Studio”
- no bootloader required
- suitable for any clock frequency
- debugging

Note: For the first programming by JTAG an “erase device” is necessary, to reset the fuses. This will also erase the factory default bootloader! That means, the device no more can be programmed with “batchisp”, until the bootloader (or another) is reflashed!

### 3.2.4 JTAG Interface

The pins 3 to 5 and 22 of the B1DIL module represents the JTAG interface. The usage of this pins in the application firmware is restricted! Any connected circuitry shouldn't have any influence, otherwise reprogramming my fault! For debugging the JTAG interface is used continuously. It is not recommended, to use this pins for other applications.

### 3.2.5 Reprogramming the Bootloader

AVR Studio 5.0 doesn't support a reprogramming of the bootloader. Doc7745.pdf contains a description how to do this manually (not recommended for inexperienced users). For the following steps you need an installed *AVR32 Studio V2.6.0* or later. Proceed the following steps:

- Connect JTAGICE MKII or any other programmer/debugger.
- Start AVR32 Studio.
- In the AVR target window right click and click ‘scan targets’. Right click on the target and select properties.
- After updating the details of debugger, device and board in properties window, right click in AVR target and select ‘Program Bootloader’.
- Complete the steps for programming the bootloader with default settings.

By completing the above steps, you will be able to load the USB DFU bootloader V1.0.3, the user page configuration word and the fuse bit settings.

Now you can flash your software (built with AVR Studio 5 or AVR32 Studio) with *batchisp*.

**Please note:** AVR32 Studio V2.6.0 will install version 1.0.3 of the bootloader. It is strictly recommended, to use version 1.0.2 or newer releases!

## 4. Concluding Remarks

### 4.1 Application Software

You will find programming and application sample software on the product homepage. Please visit the following URL:

<http://products.reworld.eu/b1dil.htm>

You will find additional information and tools on the following URLs.

Atmel AVR Tools and Software:

[http://www.atmel.com/dyn/products/product\\_card.asp?category\\_id=163&family\\_id=607&subfamily\\_id=2138&part\\_id=4176](http://www.atmel.com/dyn/products/product_card.asp?category_id=163&family_id=607&subfamily_id=2138&part_id=4176)

### 4.2 Links

Visit the following links for more information and downloads about this product, used software modules and tools.

*Reusch Elektronik* homepage for electronic products:

<http://products.reworld.eu>

Atmel Corporation, AVR data sheets:

[http://www.atmel.com/dyn/products/product\\_docs.asp?category\\_id=163&family\\_id=607&subfamily\\_id=2138&part\\_id=4176](http://www.atmel.com/dyn/products/product_docs.asp?category_id=163&family_id=607&subfamily_id=2138&part_id=4176)

WinAVR, GCC development environment:

<http://winavr.sourceforge.net/>

LibUSB-Win32, USB drivers for Microsoft Windows ®:

<http://libusb-win32.sourceforge.net/>

### 4.3 Statement and Disclaimer

This electronic device is designed under best known engineering guidelines. It confirms the appropriate design rules. No warranty or liability is given for adherence, assured properties, or damages which might be caused by the usage of this hardware or the accessory software.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

## 4.4 Technical Support

We hope you'll understand, that technical support by phone is not possible. If You have any questions, technical problems or You need information about other products from *Reusch Elektronik*, please contact us by e-mail or Fax.

E-Mail: [support@reusch-elektronik.de](mailto:support@reusch-elektronik.de)

FAX: +49-7541-81483

We are able to handle inquiries in english and german language.

Don't hesitate to contact us, if You have demand for custom specific solutions!